

## 062 Oscilloscope Quick Reference

### Button functions vs operation states:

States Buttons	NORMAL	HOLD	SAVE CAPTURE	DISPLAY CAPTURE	SEND SCREEN	FREQ
OK	Enter <b>HOLD</b>	Return to <b>NORMAL</b>	Save captures	Display selected buffer	Send screen	
OK (hold)	Enter <b>FREQ</b>					Return to <b>NORMAL</b>
+	Up adjust selected item	Up adjust selected item	Up adjust capture buffer	Up adjust capture buffer	Up adjust buffer	
-	Down adjust selected item	Down adjust selected item	Down adjust capture buffer	Down adjust capture buffer	Down adjust buffer	
+ (hold)	Fast up adjust					
- (hold)	Fast down adjust					
V.POS	Select vertical position	Enter <b>SAVE CAPTURE</b>	Return to <b>HOLD</b>			
H.POS	Select horizontal position					
SEC/DIV	Select timebase					
MODE	Select trig mode	Select trig mode				
SLOPE	Select trig slope	Enter <b>DISPLAY CAPTURE</b>		Return to <b>HOLD</b>		
LEVEL	Select trig level	Enter <b>SEND CAPTURE</b>			Return to <b>HOLD</b>	

For complete and updated documents please visit:

<http://www.ivetech.com>

Or alternatively:

<http://groups.google.com/group/jve-tech-oscilloscopes/files>

#### Related documents:

- **Operation Instructions**
- **Assembly Notes**
- **Schematic**
- **Part List**
- **Troubleshooting**
- **How to Program the Scope with Programmer or Bootloader**
- **How to Use External Trig**
- **Assembly Drawing (front)**
- **Assembly Drawing (back)**

Technical assistance email: [jyetek@gmail.com](mailto:jyetek@gmail.com)

Technical support forum: <http://groups.google.com/group/jve-tech-oscilloscopes>

**>>> IMPORTANT <<<**  
**Please read the Assembly Notes first before assembling the kit**

